

# RISH Ducer V 604

## Programmable universal transmitter



Fig. 1. Transmitter *RISH Ducer* V 604 in housing S 17 clipped on to a top-hat rail



Fig. 2. Transmitter *RISH Ducer* V 604 in housing S 17 screw hole. Mounting brackets pulled out.

For DC currents or voltages, temperature sensors, remote sensors or potentiometers

### Application

The universal transmitter *RISH Ducer* V 604 (Fig.1 & 2) converts the input variable - a DC current or voltage, or a signal from a thermocouple thermometer, remote sensor or potentiometer - to a proportional analogue output signal.

The analogue output signal is either an impressed current or superimposed voltage which is processed by other devices for purposes of displaying, recording and/or regulating a constant.

A considerable number of measuring ranges including bipolar or spread ranges are available.

Input variable and measuring range are programmed with the aid of a PC and the corresponding software. Other parameters relating to specific input variable data, the analogue output signal, the transmission mode, the operating sense and the open-circuit sensor supervision can also be programmed.

The open-circuit sensor supervision is in operation when the *RISH Ducer* V 604 is used in conjunction with a thermocouple, resistance thermometer, remote sensor or potentiometer.

The transmitter fulfils all the important requirements and regulations concerning electromagnetic compatibility EMC and Safety (IEC 1010 resp. EN 61 010).

Production QA is also certified according to guideline 94/9/EG.

### Features / Benefits

- ⊙ **Input variable** ( temperature, variation of resistance, DC signal ) and **measuring range programmed using PC / Simplifies project planning and engineering** ( the final measuring range can be determined during commissioning ). **Short delivery times and low stocking levels**
- ⊙ **Analogue output signal also programmed on the PC** (impressed current or superimposed voltage for all ranges between - 12 and + 15 V DC) / **Universally applicable. Short delivery times and low stocking levels**
- ⊙ **Electric insulation between measured variable, analogue output signal and power supply / Safe isolator acc. to EN 60 010**
- ⊙ **Wide power supply tolerance / only two operating voltage ranges between 20 and a maximum of 264 V DC / AC**
- ⊙ Standard Version as per Germanischer Lloyd
- ⊙ **Provision for either snapping the transmitter onto top-hat rails or securing it with screw to a wall or panel**
- ⊙ **Housing only 17.5 mm wide (size S17 housing) / Low space requirement**
- ⊙ **Other programmable parameters : Specific measured variable data** (e.g. two, three or four - wire connection for resistance thermometers, "Internal" or "External" cold junction compensation of thermocouple etc.) **transmission mode** (special linearised characteristic determined by a mathematical relationship, e.g. Output signal=(measured variable) ), **operating sense** (Output signal directly or inversely proportional to the measured variable) and **open-circuit sensor supervision** (output signal assumes fixed preset value between - 10 and 100%, supplementary output contact signaling relay)/**Highly flexible solutions for measurement problem.**
- ⊙ **All programming operations by IBM XT, AT or compatible PC running the self - explanatory, menu-controlled programming software, if necessary, during operation / No ancillary hand-held terminals needed**
- ⊙ **Digital measured variable data available at the programming interface/ Simplifies commissioning, measured variable and signals can be viewed on PC in the field.**
- ⊙ **Standard software includes functional test program / No external simulator or signal injection necessary.**
- ⊙ **Self - monitoring function and continuously running test program / Automatic signaling of defects and device failure.**



Rishabh Instruments

**RISHABH**  
INSTRUMENTS  
Measure, Control & Record with a Difference

RISHABH INSTRUMENTS PVT.LTD.  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

### Standards

|  |  |
|--|--|
| <b>Electromagnetic compatibility</b>                 | : The standards DIN EN 50 081 - 2 & DIN EN 50 082 - 2 are observed   |
| <b>Intrinsically safe</b>                            | : Acc. to DIN EN 50 020 : 1996-04  |
| <b>Protection (acc. to IEC 529) resp. EN 60 529)</b> | : Housing IP 40<br>Terminal IP 20  |
| <b>Electrical Design</b>                             | : Acc. to IEC 1010 resp. EN 61 010   |
| <b>Operating voltages</b>                            | : Measuring input < 40 V<br>Programming connector,<br>measuring output < 25 V<br>Output contact,<br>power supply < 250 V   |
| <b>Rated insulation Voltages</b>                     | : Measuring input, programming connector, measuring outputs, output contact, power supply < 250 V  |
| <b>Pollution Degree</b>                              | : 2  |
| <b>Installation Category II</b>                      | : Measuring input, programming connector, measuring outputs, output contact  |
| <b>Installation Category III</b>                     | : Power supply   |
| <b>Test Voltages</b>                                 | : Measuring input and programming connector to :<br><br>— Measuring outputs 2.3 kV, 50 Hz, 1 min.<br>— Power supply 3.7 kV, 50 Hz, 1 min.<br>— Output contact 2.3 kV, 50 Hz, 1 min.<br><br>Measuring outputs to:<br>— Power supply 3.7 kV, 50 Hz, 1min.<br>— Output contact 2.3 kV, 50 Hz, 1 min.<br><br>Serial interface for the PC to :<br>— Everything else 4 kV, 50 Hz, 1 min. ( PRKAB 600 ) |

### Principal of Operation (Fig 3)

The measured variable M is stepped down to a voltage between -300 and 300 mV in the input stage (1). The inputs stage includes potential dividers and shunts for this purpose. A constant reference current facilitates the measurement of resistance. Depending on the type of measurement, either one or more of the terminals 1, 2, 6, 7, and 12 and the common ground terminal 11 are used.

The constant reference current which is needed to convert a variation of resistance such as that of a resistance thermometer, remote sensor or potentiometer to a voltage signal is available at terminal 6. The internal current source (2) automatically sets the reference current to either 60 or 380. A to suit the measuring range. The corresponding signal is applied to terminal 1 and is used for resistance measurement

Terminal 2 is used for "active" sensors, i.e. thermocouple or other mV generators which inject a voltage between -300 and 300 mV small currents from the open - circuit sensor supervision (3) are connected to the cold junction compensation elements which is a Ni 100 resistor built into the terminal block.

Terminal 7 and 12 also terminals and are used for measuring current and for voltages which exceed 300mV.

An external important component of the input stage is the EMC filter which protects the transmitter from interference of even destruction due include electromagnetic waves.

From the input stage, the measured variable ( e.g. the voltage of a thermocouple ) and the two auxiliary signals ( colds junction compensation & the open - circuit sensor supervision ) go to the multiplexer (4), which controlled by the micro-controller (6) applies them cyclically to the A/D converter (5)

The A/D converter operates according to the dual slope principle with an integration time of 20 ms at 50 Hz and a conversion time of approximately 38 ms per cycle. The internal resolution is 12 Bit regardless of measuring range.

The micro - controller relates the measured variable to the auxiliary signals and to the data which were loaded in the micro-controller's EEPROM via the programming connector (7) when the transmitter was configured. These settings determine the type of measured variable, the measuring range, the transmission mode (e.g. linearised temperature / thermocouple voltage relationship) and the operating sense (output signal directly or inversely proportional to the measured variable). The measured signal is then filtered again, but this time digitally to achieve the maximum possible immunity to interference. Finally the value of the measure variable for the output signal is computed. Apart from nominal operation, the programming connector is also used to transfer measured variables on - line from the transmitter to the PC or vice versa. This is especially useful during commissioning and maintenance.



# RISH Ducer V 604

## Programmable universal transmitter

Depending on the measured variable and the input circuit, it can take 0.4 to 1.1 seconds before a valid signal arrives at the opto-coupler (8). The different processing times result from the fact that, for example, a temperature measurement with a four-wire resistance thermometer and open-circuit sensor supervision requires more measuring cycles than the straight forward measurement of a low voltage.

The main purpose of the opto-coupler is to provide electrical insulation between input and output. On the output side of the opto-coupler, the D/A convertor (9) transforms the digital signal back to an analogue signal which is then amplified in the output stage (10) and split into two - duty output is available at A1 and a less powerful output for a field display unit at A2. By a combination of programming and setting the 8 DIP switches in the output stage, the signals at A1 and A2 can be configured to be either a DC current or DC voltage ( but both must be either one or the other). The signal A1 is available at terminals 9 and 4 and A2 at terminals 8 and 3.

If the micro-controller (6) detects an open-circuit measurement sensor, it firstly sets the two output signals A1 and A2 to a constant value. The latter can be programmed to adopt a preset value between -10 and 110% or to maintain the value it had at the instant the open-circuit was detected. In this state, the micro-controller also switches on the red LED (11) and causes the green LED (12) to flash. Via the opto-coupler (8), it also excites the relay driver (13) which depending on configuration switches the relay (14) to its energised or de-energised state. The output contact is available at terminals 13, 14 and 15 used by safety circuits. In addition to being able to program the relay to be either energised or de-energised, it can also be set to "relay disabled".

In this case, an open-circuit sensor is only signalled by the output signal being held constant, the red LED being switched on and the green LED flashing. The relay can also be configured to monitor the measured variable in relation to a programmable limit.

The normal state of the transmitter is signalled when the green LED (12) is continuously lit. As explained above, it flashes should the measurement sensor become open-circuit. It also flashes, however, if the measured variable falls 10 % below the start of the measuring range or rises 10% above its maximum value and during the first five seconds after the transmitter is switched on.

The push-button S1 is for automatically calibrating the leads of a two-wire resistance thermometer circuit. This is done by temporarily shorting the resistance sensor and pressing the button for at least three seconds. The lead resistance is then automatically measured and taken into account when evaluation the measure variable.

The power supply H is connected to terminals 5 and 10 on the input block (15). The polarity is of no consequence, because the input voltage is chopped on the primary side of the power block (16) before being applied to a full-wave rectifier. Apart from the terminals, the input block (15) also contains an EMC filter which suppresses any electromagnetic interference superimposed on the power supply. The transformer block (17) provides the electrical insulation between the power supply and the other circuits and also derives two secondary voltages. One of these (5V) is rectified and stabilised (18) and then supplies the electronic circuit on the input side of the transmitter. The other AC from block (17) (-16 V / + 18 V) is rectified in (19) and used to supply the relay driver and the other components on the output side of the transmitter.

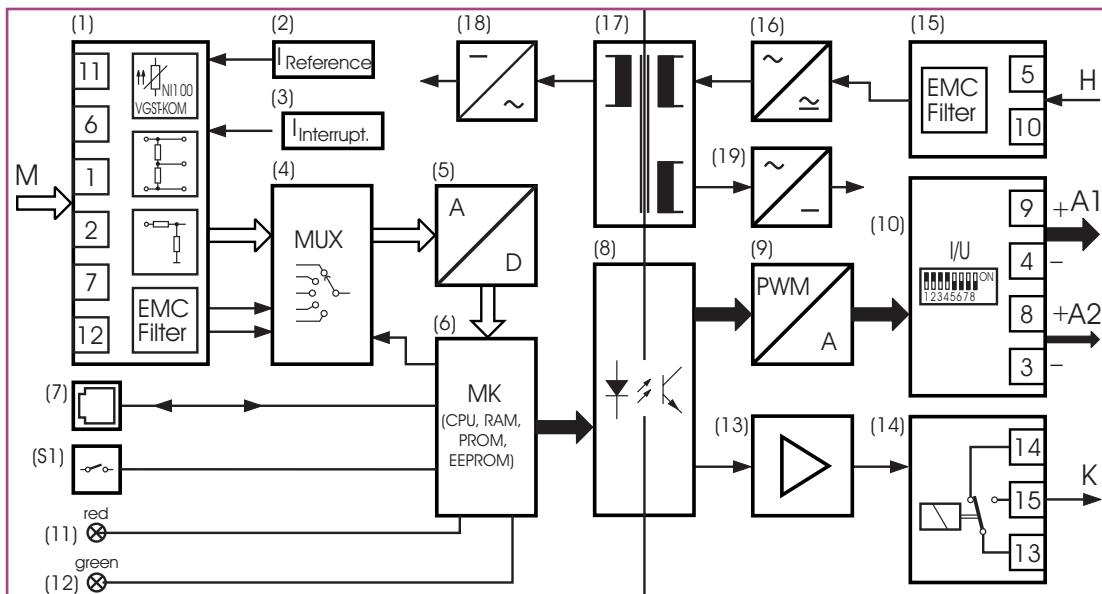


Fig. 3. Block diagram. I



**RISHABH INSTRUMENTS**  
Measure, Control & Record with a Difference

**RISHABH INSTRUMENTS PVT.LTD.**  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

### Programming (Figs. 4 and 5)

A PC with RS 232 C interface (Windows 3.1x,95,98, NT or 2000) the programming cable PRKAB 600 and the configuration software VC 600 are required to program the transmitter. (Details of the programming cable and the software are to be found in the separate Data sheet : PRKAB 600 Le.)

#### The connections between

"PC ↔ PRKAB 600 ↔ RISH Ducer V 604" can be seen from fig.4. The power supply must be applied to RISH Ducer V 604 before it can be programmed.

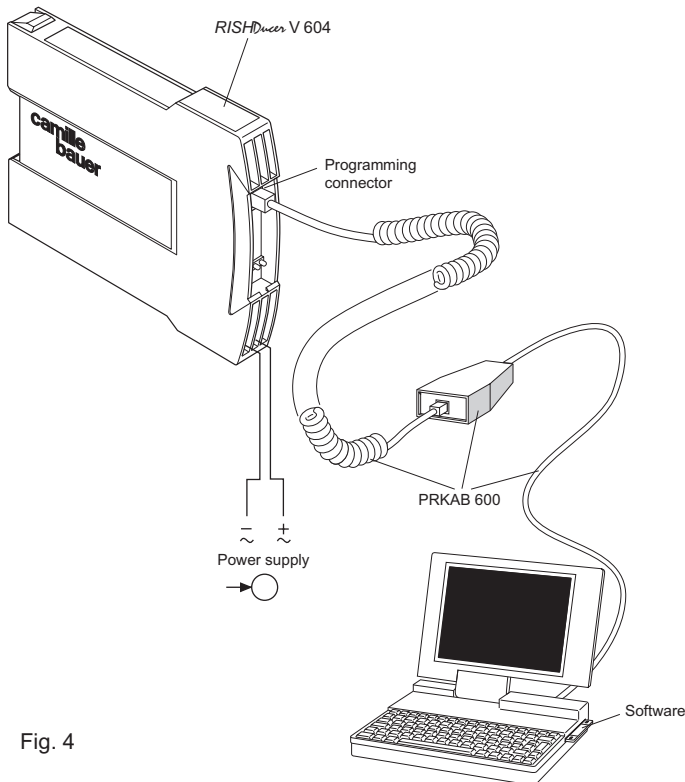


Fig. 4

The Software VC 600 is supplied on a CD.

The programming cable PRKAB 600 adjusts the signal level and provides the electrical insulation between the PC and RISH Ducer V 604

The programming cable PRKAB 600 is used for programming both standard and Ex versions.

Of the programmable details listed in section "Features / Benefits" one parameter - the output signal - has to be determined by PC programming as well as mechanical setting on the transmitter unit.....

..... the output signal range by PC

..... the type of output (current or voltage signal) has to be set by DIP switch (see Fig.5)

The eight pole DIP switch is located on the PCB the RISH Ducer V 604



| DIP switches   | Type of output signal    |
|--|--------------------------|
| ON  | load-independent current |
| ON  | load-independent voltage |

Fig. 5

### Technical Data

#### Measuring input

Measured variable M

The measured variable M and the measuring range can be programmed

Table 1 : Measured Variables and measuring ranges

| Measured variables   | Measuring ranges              |           |           |
|--|-------------------------------|-----------|-----------|
|  | Limits                        | Min. Span | Mix. Span |
| DC voltages  |                               |           |           |
| direct input   | $\pm 300 \text{ mV}^1$        | 2 mV      | 300 mV    |
| via potential divider <sup>2</sup>                                       | $\pm 40 \text{ V}^1$          | 300 mV    | 40 V      |
| DC currents  |                               |           |           |
| low current range  | $\pm 12 \text{ mA}^1$         | 0.08 mA   | 12 mA     |
| high current range   | - 50 to + 100 mA <sup>1</sup> | 0.75 mA   | 100 mA    |
| Temperature monitored by two, three or four-wire resistance thermometers | - 200 to 850°C                |           |           |
| low resistance range   | 0...740 <sup>1</sup>          | 8         | 740       |
| high resistance range  | 0...5000 <sup>1</sup>         | 40        | 5000      |
| Temperature monitored by thermocouples                                   | - 270 to 1820°C               | 2 mV      | 300 mV    |
| Variation of resistance of remote sensors / potentiometers               |                               |           |           |
| low resistance range   | 0...740 <sup>1</sup>          | 8         | 740       |
| high resistance range  | 0...5000 <sup>1</sup>         | 40        | 5000      |

<sup>1</sup> Note permissible value of the ratio "full-scale value/span  $\leq 20$ ".



Rishabh Instruments

**RISHABH**  
INSTRUMENTS  
Measure, Control & Record with a Difference

RISHABH INSTRUMENTS PVT.LTD.  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

### DC Voltage

|                         |  |
|-------------------------|--|
| <b>Measuring range</b>  | : See Table 1  |
| <b>Direct input</b>     | : Wiring diagram No.1 <sup>1</sup>                                   |
| <b>Input resistance</b> | : $R_i > 10\text{ M}$<br>continuously overload<br>Max. - 1.5V, + 5 V |

|                                    |                                     |
|------------------------------------|-------------------------------------|
| <b>Input via potential divider</b> | : Wiring diagram No. 2 <sup>1</sup> |
|------------------------------------|-------------------------------------|

|                         |   |
|-------------------------|---|
| <b>Input resistance</b> | : $R_i > 1\text{ M}$<br>continuously overload<br>Max. + 100 V |
|-------------------------|---|

### DC Current

|                         |  |
|-------------------------|--|
| <b>Measuring range</b>  | : See Table 1  |
| <b>Low Current</b>      | : Wiring diagram No.3 <sup>1</sup>                     |
| <b>Input resistance</b> | : $R_i = 24.7$<br>continuously overload<br>Max. 150 mA |

|                         |  |
|-------------------------|--|
| <b>High Currents</b>    | : Wiring diagram No. 3 <sup>1</sup>                    |
| <b>Input resistance</b> | : $R_i = 24.7$<br>continuously overload<br>Max. 150 mA |

### Resistance thermometer

|                         |  |
|-------------------------|--|
| <b>Measuring range</b>  | : See Table 1  |
| <b>Resistance types</b> | : Type Pt 100 (DIN IEC 751)<br>Type Ni 100 (DIN 43 760)<br>Type Pt 20 / 20 °C<br>Type Cu 10 / 25 °C<br>Type Cu 20 / 25 °C<br>See "Table 6 : Specification and ordering information", feature 6 for other Pt or Ni. |

|                          |   |
|--------------------------|---|
| <b>Measuring Current</b> | : $\leq 0.38\text{ mA}$ for<br>measuring ranges 0...740<br>OR<br>$\leq 0.06\text{ mA}$ for<br>measuring ranges 0...5000 |
|--------------------------|---|

|                         |   |
|-------------------------|---|
| <b>Standard circuit</b> | : 1 resistance thermometer :-<br>— two - wire connection,<br>wiring diagram No. 4 <sup>1</sup><br>— three - wire connection,<br>wiring diagram No. 5 <sup>1</sup><br>— four - wire connection,<br>wiring diagram No. 6 <sup>1</sup> |
|-------------------------|---|

|                          |   |
|--------------------------|---|
| <b>Summation circuit</b> | : Series or panel connection of 2 or more two, three or four - wire resistance thermometers for deriving the mean temperature or for matching other types of sensor, wiring diagram Nos. 4 - 6 <sup>1</sup> |
|--------------------------|---|

|                             |   |
|-----------------------------|---|
| <b>Differential circuit</b> | : 2 identical three- wire resistance thermometers for deriving the mean temperature $RT_1 - RT_2$<br>wiring diagram No 7 <sup>1</sup> |
| <b>Differential circuit</b> | : $R > 10\text{ M}$   |
| <b>Lead resistance</b>      | : $\leq 30$ per lead  |

### Thermocouples

|                        |  |
|------------------------|--|
| <b>Measuring range</b> | : See Table 1 and 8  |
| <b>Measuring range</b> | : Type B : Pt30Rh-Pt6Ph (IEC 584)<br>Type E : NiCr-CuNi (IEC 584)<br>Type J : Fe-CuNi (IEC 584)<br>Type K : NiCr-Ni (IEC 584)<br>Type L : Fe-CuNi (DIN 43710)<br>Type N : NiCrSi-Ni-Si (IEC 584)<br>Type R : Pt13Ph-Pt (IEC 584)<br>Type S : Pt10Ph-Pt (IEC 584)<br>Type T : Cu-CuNi (IEC 584)<br>Type U : Cu-CuNi (DIN 43710)<br>Other thermometer pairs on request |

|                         |  |
|-------------------------|--|
| <b>Standard circuit</b> | : 1 thermocouple, internal cold junction compensation wiring diagram No. 8 <sup>1</sup><br>1 thermocouple, external cold junction compensation wiring diagram No. 9 <sup>1</sup> |
|-------------------------|--|

|                          |  |
|--------------------------|--|
| <b>Summation Circuit</b> | : 2 or more thermocouples in a summation circuit for deriving the mean temperature, external cold junction compensation wiring diagram No. 10 <sup>1</sup> |
|--------------------------|--|

|                             |  |
|-----------------------------|--|
| <b>Differential Circuit</b> | : 2 identical thermocouples in a differential circuit for deriving the mean temperature, TC1 - TC2, no provision for cold junction compensation wiring diagram No. 11 <sup>1</sup> |
|-----------------------------|--|

|                         |                       |
|-------------------------|-----------------------|
| <b>Input resistance</b> | : $R_i > 10\text{ M}$ |
|-------------------------|-----------------------|

### Cold Junction

|                     |                        |
|---------------------|------------------------|
| <b>Compensation</b> | : Internal or external |
| <b>Internal</b>     | : Incorporated Ni 100  |

|   |                                   |
|---|-----------------------------------|
| <b>Permissible variation of the internal cold junction compensation</b> | : + 0.5 K at 23 °C, + 0.25 K/10/K |
|---|-----------------------------------|

|                 |                            |
|-----------------|----------------------------|
| <b>Internal</b> | : 0...70 °C , programmable |
|-----------------|----------------------------|

<sup>1</sup>See "Table 9: Measuring input".



Rishabh Instruments

**RISHABH**  
**INSTRUMENTS**  
Measure, Control & Record with a Difference

RISHABH INSTRUMENTS PVT.LTD.  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

### Resistance sensor, potentiometer

|                                |   |
|--------------------------------|---|
| <b>Measuring range</b>         | : See Table 1   |
| <b>Resistance sensor types</b> | : Type WF<br>Type WF DIN<br>Potentiometer see "Table 6: specification and ordering information" feature 5.  |
| <b>Measuring Current</b>       | : $\leq 0.38$ mA for measuring range 0...740 OR<br>$< 0.06$ mA for measuring range 0...5000   |
| <b>Kinds of Input</b>          | : 1 resistance sensor WF current measured at pick-up wiring diagram No. 12 <sup>1</sup><br><br>1 resistance sensor WF current measured at pick-up wiring diagram No. 13 <sup>1</sup><br><br>1 resistance sensor for two, three or four-wire connection, wiring diagram No. 4-6 <sup>1</sup><br><br>2 identical three-wire resistance sensor for deriving a differential wiring diagram No. 7 <sup>1</sup> |
| <b>Input resistance</b>        | : $R_i > 10$ M  |
| <b>Lead resistance</b>         | : $\leq 30$ per lead  |

### Output signal

Output signals A1 and A2

The output signals available at A1 and A2 can be configured for either an impressed DC current  $I_A$  or a superimposed DC voltage  $U_A$  by appropriately setting DIP switches. The desired range is programmed using a PC. A1 and A2 are not DC isolated and exhibit the same value.

|  |   |
|--|---|
| <b>Standard ranges for <math>I_A</math></b>    | : 0...20 mA or 4...20 mA  |
| <b>Non - standard ranges</b>                   | : Limit -22 to +22mA<br>Min. span 5 mA<br>Max. span 40 mA   |
| <b>Open-circuit Voltage</b>                    | : Neg.-13.2...-18 V, pos. 16.5...21V  |
| <b>Burden voltage <math>I_{A1}</math></b>      | : + 15 V, resp. -12 V   |
| <b>External resistance <math>I_{A1}</math></b> | : $R_{ext} \max. [k] = \frac{15 V}{I_{AN} [mA]}$<br>resp. $= \frac{-12 V}{I_{AN} [mA]}$<br><br>$I_{AN}$ = full-scale output current |
| <b>Burden voltage <math>I_{A2}</math></b>      | : $< 0.3$ V   |

|   |  |
|---|--|
| <b>External resistance <math>I_{A2}</math></b>          | : $R_{ext} \max. [k] = \frac{0,3 V}{I_{AN} [mA]}$                            |
| <b>Residual ripple:</b>                                 | : $< 1\%$ p.p., DC ... 10 kHz<br>$< 1.5\%$ p.p. for an output span $< 10$ mA |
| <b>Standard ranges for <math>U_A</math></b>             | : 0...5, 1...5, 0...10 or 2...10 V   |
| <b>Non-standard ranges:</b>                             | : Limits -12 to + 15 V<br>Min. span 4 V<br>Max. span 27 V                    |
| <b>Open-circuit voltage</b>                             | : $\leq 40$ mA   |
| <b>Load capacity <math>U_{A1} / U_{A2}</math></b>       | : 20 mA  |
| <b>External resistance <math>U_{A1} / U_{A2}</math></b> | : $R_{ext} [k] \geq \frac{U_A [V]}{20 \text{ mA}}$                           |
| <b>Residual ripple</b>                                  | : $< 1\%$ p.p., DC ... 10 kHz<br>$< 1,5\%$ p.p. for an output span $< 8$ V   |

### Fixed settings for the output signals A1 and A2

|                           |  |
|---------------------------|--|
| <b>After switching on</b> | : A1 and A2 are at a fixed value for 5 s after switching on ( default ). Setting range - 10 to 110% <sup>2</sup> programmable, e.g. between 2.4 & 21.6 mA (for a scale of 4 to 20 mA).<br>The green LED ON flashes for the 5s. |
|---------------------------|--|

### When input variable out of limits

|                            |  |
|----------------------------|--|
| :                          | A1 and A2 are at a either a lower or an upper fixed value when input variable...<br>... falls more than 10% below the minimum value of the permissible range<br>... exceeds the maximum value of the permissible range by more than 10%.<br>Lower fixed value = $-10\%2$ ,<br>e.g. - 2 mA ( for a scale of 0 to 20 mA).<br>Upper fixed value = $110\%2$ ,<br>e.g. 22 mA (for a scale of 0 to 20 mA).<br>The green LED ON flashes |
| <b>Open-circuit sensor</b> | : A1 and A2 are at a fixed value when an open - circuit sensor is detected (see section "Sensor and open - circuit lead supervision $\rightarrow$ " )<br>The fixed value of A1 and A2 is configured to either maintain their values at the instant the open-circuit occurs or adopt a preset value between -10 and $110\%2$ , e.g. between 1.2 and 10.8 V ( for scale of 2 to 10 V ).  |

<sup>1</sup> See "Table 9 : Measuring Input".

<sup>2</sup> In relation to analogue output span A1 resp. A2.







# RISH Ducer V 604

## Programmable universal transmitter

### Output characteristic

Characteristic : Programmable

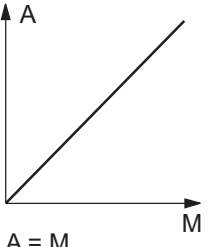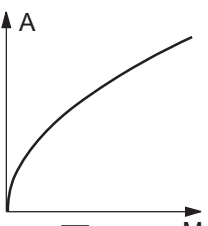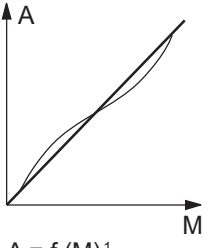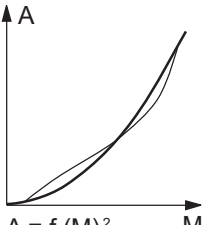Table 2 : Available characteristics(acc. to measured variable)

| Measured variables   | Characteristic  |
|--|---|
| DC voltage   |    |
| DC current   |   |
| Resistance thermometer (linear variation of resistance)    |   |
| Thermocouple (linear variation of voltage)                 |   |
| Sensor or potentiometer                                    | $A = M$   |
| DC voltage   |    |
| DC current   |   |
| DC voltage   |  |
| DC current   |   |
| Resistance thermometer (linear variation with temperature) |   |
| Thermocouple signal (linear variation with temperature)    |   |
| Sensor or potentiometer                                    |   |
| DC voltage   |  |
| DC current   |   |
| Sensor or potentiometer                                    |   |

Special characteristic

**Operating Sense** : Programmable output signal directly OR inversely proportional to measured variable

**Setting Time (IEC 770)** : Programmable from 2 to 30 s

<sup>1</sup> 25 input point M given referred to a linear output scale from -10% to +110% in steps of 5%.

### Power supply H $\rightarrow \bigcirc$

DC, AC power pack ( DC and 45 ... 400 Hz )

Table 3 : Nominal voltage and tolerance

| Nominal voltage $U_N$              | Tolerance                      |
|------------------------------------|--------------------------------|
| 24... 60 V<br>DC / AC              | DC -15...+ 33%<br>AC $\pm$ 15% |
| 85...230 V <sup>3</sup><br>DC / AC |                                |

**Power consumption**  $\leq$  1.4 W resp.  $\leq$  2.7 VA

### Open - circuit sensor circuit supervision $\rightarrow$

Potentiometer input circuits are supervised. The circuit of DC Voltage Resistance thermometers, thermocouples, remote sensor and age and current inputs are not supervised.

**Pick - up / reset level** : 1 to 15k acc. kind of measurement and range

### Signalling modes

#### Output signals A1 and A2

: Programmable fixed values. The fixed value of A1 and A2 is configured to either maintain their values at the instant the open - circuit occurs or adopt a preset value between -10 and 110%<sup>4</sup>, e.g. between 1.2 and 10.8 V ( for a scale of 2 to 10 V )

#### Fount plate signals

: The green LED ON flashes and the red LED  $\rightarrow$  lights continuously

#### Output contact K

: Relay 1 potentially - free changeover contact ( see Table 4 )  
Operating sense programmable The relay can be either energised or de - energised in the case of a disturbance. Set to "Relay inactive" if not required!

<sup>2</sup> 25 input point M given referred to a quadratic output scale from -10% to +110% Pre-defined output points : 0, 0, 0, 0.25, 1,2.25, 1, 2.25, 4.00, 6.25, 9.00, 12.25, 16.00, 20.25, 25.00, 30.25, 36.00, 42.25, 49.00, 56.25, 64.00, 72.25, 81.00, 90.25, 100.0, 110.0, 11.0%

<sup>3</sup> An external supply fuse must be provided for DC supply voltages  $>$  125 V.

<sup>4</sup> In relation to analogue output span A1 resp. A2.



**RISHABH INSTRUMENTS**  
Measure, Control & Record with a Difference

RISHABH INSTRUMENTS PVT.LTD.  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

### Supervising a limit GW ( $\Delta$ )

This Section only applies to transmitters which are not configured to use the contact K in conjunction with the open-circuit sensor supervision (see section "Open-circuit sensor circuit supervision  $\rightarrow$  ")

This applies ....

.... in all cases when the measured variable is a DC voltage or current.

.... When the measured variable is a resistance thermometer, a thermocouple, a remote sensor or a potentiometer and the relay is set to "Relay disable"

- Limit:**
- Programmable
  - Disabled
  - Lower Limit value of the measured variable (see Fig. 6, left)
  - Upper Limit value of the measured variable (see Fig. 6, left)
  - Maximum rate of change of the measured variable (see Fig. 6, left)
- $$\text{Slope} = \frac{\Delta \text{measured variable}}{\Delta t}$$
- (see Fig. 6, right)

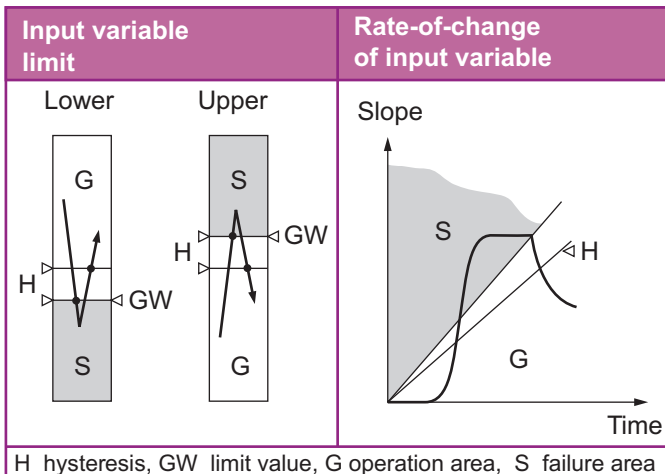


Fig. 6. Switching function according to limit monitored.

### Trip point setting

#### Using PC for GW

- Programmable
- between - 10 and 110 %<sup>1</sup> ( of the measured variable )
  - between  $\pm 1$  and  $\pm 50\%$ <sup>1</sup> / s ( of the rate-of -change of the measured variable).

#### Using PC for GW

- Programmable
- between 0.5 and 100 %<sup>1</sup> ( of the measured variable )
  - between 1 and 100 %<sup>1</sup> / s ( of the rate-of -change of the measured variable).

### operating and resetting delays :

programmable  
- between 1 to 60 s

### Operating sense

programmable  
- Relay energised, LED on  
- Relay energised, LED off  
- Relay de-energised, LED on  
- Relay de-energised, LED off  
( once limit reached )

### Relay status signal

GW by red LED (  $\Delta$  )

Table 4 : Contact arrangement and data

| Symbol | Material                  | Contact rating   |
|--------|---------------------------|--|
|        | Gold flashed silver alloy | AC: $\leq 2$ A / 250 V (500 VA)<br>DC: $\leq 1$ A / 0.1...250 V (30 W) |

Relay approved by UL, CSA, TÜV, SEV

### Programming connector

- Interface** RS 232 C
- FCC-68 Socket** 6 / 6 pin
- Signal level** TTL ( 0 / 5 V )
- Power consumption** Approximately 50 mW

### Accuracy data( acc. to DIN/EC 770 )

#### Basic accuracy

Max. error  $< + 0.2$  %  
Including linearity and repeatability error for current, voltage & resistance measurement

#### Additional error (additive)

$< + 0.3\%$  for linearised characteristic  
 $< + 0.3\%$  for measuring ranges  $< 5$  mV, 0.3...0.75 V,  $< 0.2$  mA or  $< 20$   
 $< + 0.3\%$  for a high ratio between full - scale value and measuring range  $>$  factor 10, e.g. Pt 100 175.84 ...194.07  $\cong 200^{\circ}$  C...250 $^{\circ}$  C  
 $< + 0.3\%$  of current output  $< 10$  mA span  
 $< + 0.3\%$  for voltage output  $< 8$  V span  
 $< 2 \cdot$  ( Basic and additional error) for two-wire resistance measurement

<sup>1</sup> In relation to analogue output A1 resp. A2.



Rishabh Instruments

**RISHABH INSTRUMENTS**  
Measure, Control & Record with a Difference

RISHABH INSTRUMENTS PVT.LTD.  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in



# RISH Ducer V 604

## Programmable universal transmitter

### Reference conditions:

|                            |  |
|----------------------------|--|
| <b>Ambient temperature</b> | 23° C, ± 2 K   |
| <b>Power Supply</b>        | 24 V DC ± 10% and 230 V AC ± 10%   |
| <b>Output burden</b>       | Current : 0.5 · R <sub>ext</sub> max.<br>Voltage : 2 · R <sub>ext</sub> min. |

### Influencing factors

|   |  |
|---|--|
| <b>Temperature</b>                          | < ± 0.1 ... 0.15% per 10 K   |
| <b>Burden</b>                               | < ± 0.1 % for current output<br>< 0.2 % for voltage output, providing R <sub>ext</sub> > 2 · R <sub>ext</sub> min. |
| <b>Long-time drift</b>                      | < ± 0.3% / 12 months   |
| <b>Switch-on drift</b>                      | < ± 0.5%   |
| <b>Common and transverse mode influence</b> | < ± 0.2%   |
| <b>+ or - output connected to ground</b>    | < ± 0.2%   |

### Installation Data

|                              |   |
|------------------------------|---|
| <b>Housing</b>               | Housing types S17<br>Refer to section "Dimensional drawings" for dimensions   |
| <b>Material of housing</b>   | Lexan 940 ( polycarbonate ).<br>Flammability class V-0 acc. to UL-94, self-extinguishing, non-dripping, free of halogen   |
| <b>Mounting</b>              | For snapping onto top-hat rail (35X15mm or 35 X7.5mm) acc. to EN 50 022 OR<br>Directly onto a wall or panel using the pull-out screw hole brackets  |
| <b>Mounting position</b>     | Any   |
| <b>Terminal</b>              | DIN/VDE 0609<br>Screw terminals with wire guards for light PVC wiring and max. 2X0.75 mm <sup>2</sup> or 1X2,5 mm <sup>2</sup>  |
| <b>Permissible</b>           | 2g acc. to EN 60 068-2-6<br>10 ... 150 ... 10 Hz<br>10 cycles   |
| <b>Choc</b>                  | 3 X 50g<br>3 shocks each in 6 directions acc. to EN 60 068 -2-27  |
| <b>Weight</b>                | Approximately 0.25 kg.  |
| <b>Electrical insulation</b> | All circuit ( measuring input / measuring output/power supply / output contact) are electrically insulated.<br>Programming connector & measuring input are connected.<br>The PC is electrically insulated by the programming cable PRKAB 600. |

### Ambient Condition

|                                       |  |
|---------------------------------------|--|
| <b>Commissioning temperature:</b>     | - 10 to + 55°C   |
| <b>Operating temperature:</b>         | - 25 to + 55°C, Ex - 20 to + 55°C                                |
| <b>Storage temperature:</b>           | - 40 to + 70 °C  |
| <b>Relative humidity annual mean:</b> | ≤ 75% standard climatic rating<br>≤ 95% enhanced climatic rating |

### Basic configuration

The transmitter *RISH Ducer V 604* is also available already program - med with a basic configuration which is especially recommended. In cases where the programming data is not known at the time of ordering (see "Table 6 : Specification and ordering information" Feature 4.).

*RISH Ducer V 604* supplied as standard versions are programmed for basic configuration (See "Table 5 : Standard versions").

|                            |   |
|----------------------------|---|
| <b>Basic Configuration</b> | Measuring input 0...5 V DC<br>Measuring output 0...20 mA linear fixed value 0%<br>during 5 s after switching on setting time 0.7 s<br>Open - circuit supervision inactive<br>Mains ripple suppression 50 Hz<br>Limit functions inactive |
|----------------------------|---|

### Table 5 : Standard versions

The following 8 transmitter version are already programmed for basic configuration and are available as standard versions. It is necessary to quote the Oder No. :

| Cold junction compensation | Climatic rating | Instrument       | Power Supply       |
|----------------------------|-----------------|------------------|--------------------|
| Included                   | standard        | Standard version | 24... 60 V DC / AC |
|                            |                 |                  | 85...230 V DC / AC |

The complete order code<sup>1</sup> 604 - ...0 and / or a description should be started for other versions with the works configuration.

<sup>1</sup> See "Table 6 : Specification and ordering information".



# RISH Ducer V 604

## Programmable universal transmitter

Table 6 : Temperature measuring ranges

| Measuring range [°C]        | Resistance thermometer   |            | Thermocouple        |              |              |              |             |              |             |             |             |             |
|-----------------------------|--|------------|---------------------|--------------|--------------|--------------|-------------|--------------|-------------|-------------|-------------|-------------|
|                             | Pt100  | Ni100      | B                   | E            | J            | K            | L           | N            | R           | S           | T           | U           |
| 0... 20                     |  |            |                     |              |              |              |             |              |             |             |             |             |
| 0... 25                     | X  | X          |                     |              |              |              |             |              |             |             |             |             |
| 0... 40                     | X  | X          |                     | X            | X            |              | X           |              |             |             |             |             |
| 0... 50                     | X  | X          |                     | X            | X            | X            | X           |              |             |             | X           | X           |
| 0... 60                     | X  | X          |                     | X            | X            | X            | X           |              |             |             | X           | X           |
| 0... 80                     | X  | X          |                     | X            | X            | X            | X           |              |             |             | X           | X           |
| 0... 100                    | X  | X          |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| 0... 120                    | X  | X          |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| 0... 150                    | X  | X          |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| 0... 200                    | X  | X          |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| 0... 250                    | X  | X          |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| 0... 300                    | X  |            |                     | X            | X            | X            | X           | X            | X           | X           | X           | X           |
| 0... 400                    | X  |            |                     | X            | X            | X            | X           | X            | X           | X           | X           | X           |
| 0... 500                    | X  |            |                     | X            | X            | X            | X           | X            | X           | X           |             | X           |
| 0... 600                    | X  |            |                     | X            | X            | X            | X           | X            | X           | X           |             | X           |
| 0... 800                    |  |            | X                   |              |              |              |             |              |             |             |             |             |
| 0... 900                    |  |            | X                   | X            | X            | X            | X           | X            | X           | X           |             |             |
| 0... 1000                   |  |            | X                   | X            | X            | X            |             | X            | X           | X           |             |             |
| 0... 1200                   |  |            | X                   |              | X            | X            |             | X            | X           | X           |             |             |
| 0... 1500                   |  |            | X                   |              |              |              |             |              | X           | X           |             |             |
| 0... 1600                   |  |            | X                   |              |              |              |             |              | X           | X           |             |             |
| 50... 150                   | X  | X          |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| 100... 300                  | X  |            |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| 300... 600                  | X  |            |                     | X            | X            | X            | X           | X            | X           | X           |             | X           |
| 600... 900                  |  |            | X                   | X            | X            | X            | X           | X            | X           | X           |             |             |
| 600... 1000                 |  |            | X                   | X            | X            | X            |             | X            | X           | X           |             |             |
| 900... 1200                 |  |            | X                   |              | X            | X            |             | X            | X           | X           |             |             |
| 600... 1600                 |  |            | X                   |              |              |              |             |              | X           | X           |             |             |
| 600... 1800                 |  |            | X                   |              |              |              |             |              |             |             |             |             |
| -20... 20                   | X  | X          |                     | X            | X            |              | X           |              |             |             |             |             |
| -10... 40                   | X  | X          |                     | X            | X            | X            | X           |              |             |             |             | X           |
| -30... 60                   | X  | X          |                     | X            | X            | X            | X           | X            |             |             | X           | X           |
| Measuring range limits [°C] | -200 to 850  | -60 to 250 | 0 to 1820           | -270 to 1000 | -210 to 1200 | -270 to 1372 | -200 to 900 | -270 to 1300 | -50 to 1769 | -50 to 1769 | -270 to 400 | -200 to 600 |
|                             | $\Delta R$ min 8 at full-scale $\leq 740$<br>$\Delta R$ min 40 at full-scale $> 740$ to 5000 |            | $\Delta U$ min 2 mV |              |              |              |             |              |             |             |             |             |



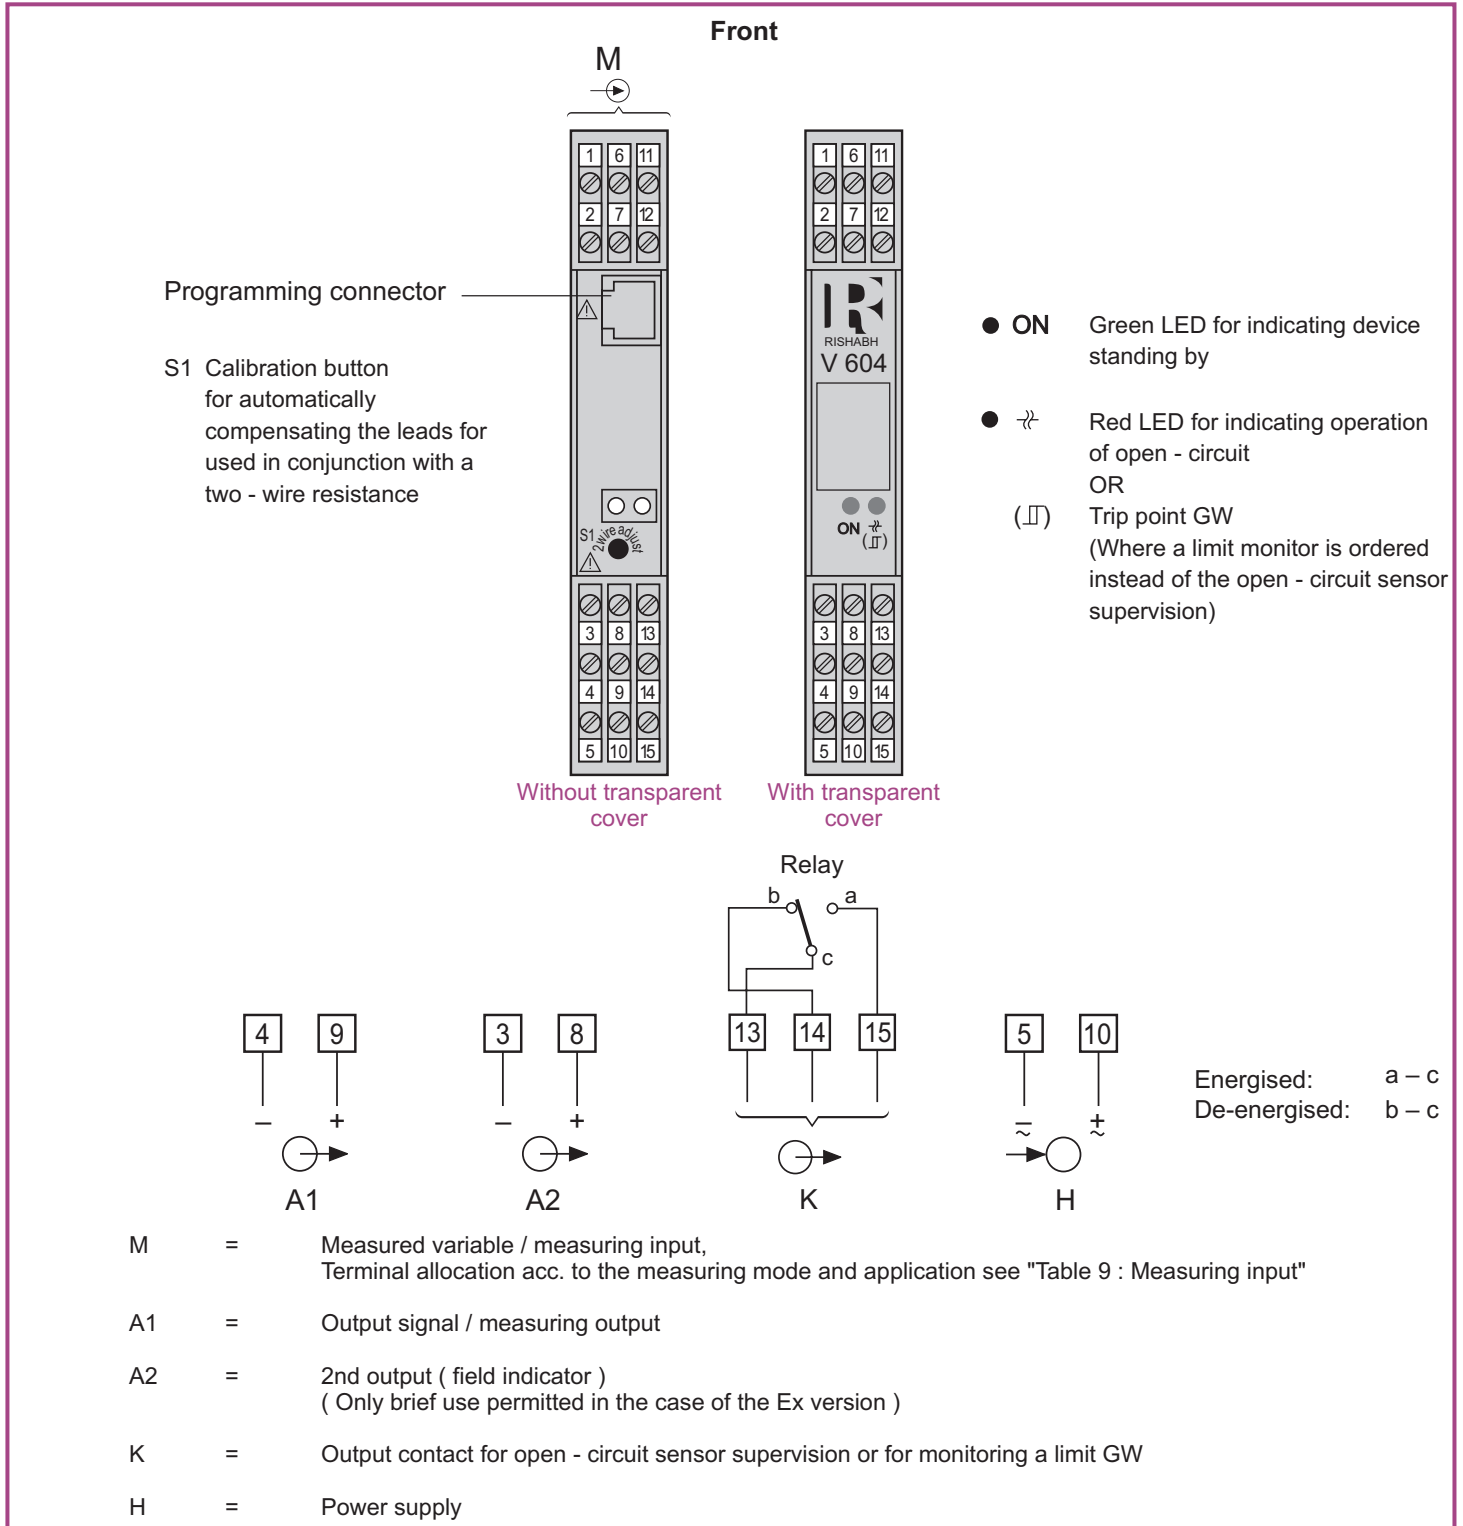
**RISHABH INSTRUMENTS**  
 Measure, Control & Record with a Difference

RISHABH INSTRUMENTS PVT.LTD.  
 F-31, MIDC, Satpur, Nashik-422 007, India.  
 Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
 E-mail : India :- marketing@rishabh.co.in  
 International :- exp.marketing@rishabh.co.in  
 www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

### Electrical connections
















**RISHABH INSTRUMENTS**  
Measure, Control & Record with a Difference

**RISHABH INSTRUMENTS PVT.LTD.**  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

**Table 7 : Measuring input**

| Measurement   | Measuring range limits                  | Measuring span                   | Wiring diagram |   |
|---|---|----------------------------------|----------------|---|
|   |   |                                  | No.            | Terminal arrangement  |
| DC voltage (direct input)   | - 300...0...300 mV                      | 2...300 mV                       | 1              |    |
| DC voltage (input via potential divider)                                      | - 40...0...40 V                         | 0.3 .... 40 V                    | 2              |    |
| DC current  | - 12...0... 12 mA/<br>- 50...0...100 mA | 0.08... 12 mA /<br>0.75...100 mA | 3              |    |
| Resistance thermometer RT or resistance measurement R, two-wire connection    | 0... 740 /<br>0...5000                  | 8... 740<br>40...5000            | 4              |    |
| Resistance thermometer RT or resistance measurement R, three-wire connection  | 0... 740 /<br>0...5000                  | 8... 740 /<br>40...5000          | 5              |    |
| Resistance thermometer RT or resistance measurement R, four-wire connection   | 0... 740<br>0...5000                    | 8... 740 /<br>40...5000          | 6              |   |
| 2 identical three-wire resistance transmitters RT for deriving the difference | RT1 - RT2<br>0... 740<br>0...5000       | 8... 740 /<br>40...5000          | 7              |  |
| Thermocouple TC Cold junction compensation internal                           | - 300...0...300 mV                      | 2...300 mV                       | 8              |  |
| Thermocouple TC Cold junction compensation external                           | - 300...0...300 mV                      | 2...300 mV                       | 9              |  |
| Thermocouple TC in a summation circuit for deriving the mean temperature      | - 300...0...300 mV                      | 2...300 mV                       | 10             |  |
| Thermocouple TC in a differential circuit for deriving the mean temperature   | TC1 - TC2<br>- 300...0...300 mV         | 2...300 mV                       | 11             |  |
| Resistance sensor WF  | 0... 740<br>0...5000                    | 8... 740<br>40...5000            | 12             |  |
| Resistance sensor WF DIN  | 0... 740<br>0...5000                    | 8... 740<br>40...5000            | 13             |  |



**RISHABH INSTRUMENTS**  
Measure, Control & Record with a Difference


**RISHABH INSTRUMENTS PVT.LTD.**  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

**Table 8 : Specification and ordering information** ( See also "Table 5 : Standard Versions" )
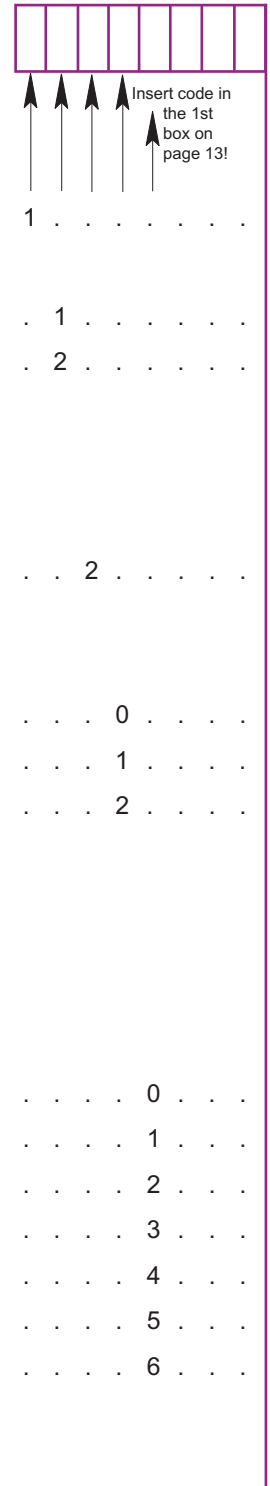
| Order Code 604 -  |        |       |
|---|--------|-------|
| Features, Selection   | *SCODE | no-go |
| <b>1. Mechanical design</b>   |        |       |
| 1) Housing S17  |        |       |
| <b>2. Version / Power supply H (nominal voltage U<sub>N</sub>)</b>  |        |       |
| 1) Standard / 24... 60 V DC/AC  |        |       |
| 2) Standard / 85...230 V DC/AC  |        |       |
| <b>3. Climatic rating / Cold junction compensation</b>  |        |       |
| 2) Standard climatic rating; instrument with cold junction compensation   |        |       |
| <b>4. Configuration</b>   |        |       |
| 0) Basic configuration, programmed  | Z      |       |
| 1) Programmed to order  |        |       |
| 2) Programmed to order with test certificate  |        |       |
| Line 0: If you wish to order the basic configuration, the line "0" must be selected for options 4. to 13., i.e. all the digits of the order code after the 4th, are zeros, see "Table 5: Standard versions" |        |       |
| Lines 0 and 1: No test certificate  |        |       |
| <b>5. Measured variable / Measuring input M</b>   |        |       |
| <b>DC voltage</b>   |        |       |
| 0) 0... 5 V linear  | C      |       |
| 1) 1... 5 V linear  | C      | Z     |
| 2) 0...10 V linear  | C      | Z     |
| 3) 2...10 V linear  | C      | Z     |
| 4) Linear input, other ranges [V]   | C      | Z     |
| 5) Square root input function [V]   | C      | Z     |
| 6) Input x 3/2 [V]  | C      | Z     |
| Lines 4 to 6: DC [V] 0...0.002 to 0... ≤ 40 V (Ex max. 30 V) or span 0.002 to 40 V between -40 and 40 V, ratio full-scale/span ≤ 20   |        |       |



Feature " 5. Measured variable / measuring input M " continued on next page !



**RISHABH INSTRUMENTS**  
Measure, Control & Record with a Difference

**RISHABH INSTRUMENTS PVT.LTD.**  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# RISH Ducer V 604

## Programmable universal transmitter

| Order Code 604 -  |  | *SCODE | no-go |
|---|--|--------|-------|
| <b>5. Measured variable / Measuring input M (continuation)</b>  |  |        |       |
| <b>DC current</b>   |  |        |       |
| 7) 0 ... 20 mA linear   |  | C      | Z     |
| 8) 4 ... 20 mA linear   |  | C      | Z     |
| 9) Linear input, other ranges [mA]  |  | C      | Z     |
| A) Square root input function [mA]  |  | C      | Z     |
| B) Input x 3/2 [mA]   |  | C      | Z     |
| Lines 9, A and B; DC [mA] 0 ... 0.08 to 0 ... 100 mA or span 0.08 to 100 mA between -50 and 100 mA, ratio full - scale / span ≤ 20                                  |  |        |       |
| <b>Resistance thermometer, linearised</b>   |  |        |       |
| C) Two - wire connection, $R_L$ [ ]   |  | E      | Z     |
| D) Three - wire connection, $R_L \leq 30$ / wire  |  | E      | Z     |
| E) Four - wire connection, $R_L \leq 30$ / wire   |  | E      | Z     |
| <b>Resistance thermometer, non - linearised</b>   |  |        |       |
| F) Two - wire connection, $R_L$ [ ]   |  | E      | Z     |
| G) Three - wire connection, $R_L \leq 30$ / wire  |  | E      | Z     |
| H) Four - wire connection, $R_L \leq 30$ / wire   |  | E      | Z     |
| J) Temperature difference [deg]   |  | E      | Z     |
| 2 identical resistance thermometers in three - wire connection  |  |        |       |
| Lines C and F : Specify total lead resistance $R_L$ [ ], any value between 0 and 60 This may be omitted, because two leads can be compensated automatically on site |  |        |       |
| Lines J : Temperature difference ; specify measuring range [deg], also for feature 6. : $t_{min}$ ; $t_{max}$ ; $t_{reference}$                                     |  |        |       |
| <b>Thermocouple linearised</b>  |  |        |       |
| K) Internal cold junction compensation ( not for type B )   |  | DT     | Z     |
| L) External cold junction compensation ( specify 0°C for type B)* $tK[°C]$  |  | D      | Z     |
| <b>Thermocouple non - linearised</b>  |  |        |       |
| M) Internal cold junction compensation ( not for type B )   |  | DT     | Z     |
| N) External cold junction compensation ( specify 0°C for type B)* $tK[°C]$  |  | D      | Z     |
| P) Average temperature [n] $tK[°C]$   |  | D      | Z     |
| Q) Temperature difference [deg]   |  | E      | Z     |
| 2 identical thermocouples   |  |        |       |
| Lines L, N and P : Specify external cold junction temperature $tK[°C]$ , any value between 0 and 70°C   |  |        |       |
| Lines P : State number of sensors [n]   |  |        |       |
| Lines Q : Temperature difference ; specify measuring range [deg], also for feature 6. : $t_{min}$ ; $t_{max}$ ; $t_{reference}$                                     |  |        |       |

|  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|

Insert code in the 1st box of the next page!

- 7 . . . . .
- 8 . . . . .
- 9 . . . . .
- A . . . . .
- B . . . . .
  
- C . . . . .
- D . . . . .
- E . . . . .
  
- F . . . . .
- G . . . . .
- H . . . . .
- J . . . . .
  
- K . . . . .
- L . . . . .
  
- M . . . . .
- N . . . . .
  
- P . . . . .
- Q . . . . .

\* Because of its characteristic, thermocouple type B not required compensating leads nor cold junction compensation.

Feature " 5. Measured variable / measuring input M " continued on next page !



**RISHABH INSTRUMENTS**  
 Measure, Control & Record with a Difference

**RISHABH INSTRUMENTS PVT.LTD.**  
 F-31, MIDC, Satpur, Nashik-422 007, India.  
 Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
 E-mail : India :- marketing@rishabh.co.in  
 International :- exp.marketing@rishabh.co.in  
 www.rishabh.co.in



# RISH Ducer V 604

## Programmable universal transmitter

Order Code 604 -

Features, Selection

\*SCODE

no-go

### 6. Sensor type / Temperature range (continuation)

|                          |        |  |       |
|--------------------------|--------|--|-------|
| B) Type B : Pt30Rh-Pt6Rh | [ °C ] |  | CEFTZ |
| E) Type E : NiCr-CuNi    | [ °C ] |  | CEFZ  |
| J) Type J : Fe-CuNi      | [ °C ] |  | CEFZ  |
| K) Type K : NiCr-Ni      | [ °C ] |  | CEFZ  |
| L) Type L : Fe-CuNi      | [ °C ] |  | CEFZ  |
| N) Type N : NiCrSi-NiSi  | [ °C ] |  | CEFZ  |
| R) Type R : Pt13Rh-Pt    | [ °C ] |  | CEFZ  |
| S) Type S : Pt10Rh-Pt    | [ °C ] |  | CEFZ  |
| T) Type T : Cu-CuNi      | [ °C ] |  | CEFZ  |
| U) Type U : Cu-CuNi      | [ °C ] |  | CEFZ  |
| W) Type W5 - W26Re       | [ °C ] |  | CEFZ  |

Lines B to W : Specify measuring range in [ °C ] or °F, refer to Table 8 for the operating limits for each type of sensor.

For temperature difference measurement : Specify measuring range and reference temperature for 2nd sensor (  $t_{min}$  ;  $t_{max}$  ;  $t_{reference}$  ), e.g. 100; 250; 150

### 7. Output signal / Measuring output A1\*

|                                      |       |   |               |
|--------------------------------------|-------|---|---------------|
| 0) 0...20 mA, $R_{ext} \leq 750$     |       | Z | . 0 . . . . . |
| 1) 4...20 mA, $R_{ext} < 750$        |       | Z | . 1 . . . . . |
| 2) Non - Standard                    | [mA]  | Z | . 2 . . . . . |
| 3) 0... 5 V, $R_{ext} \geq 250$      |       | Z | . 3 . . . . . |
| 4) 1... 5 V, $R_{ext} \geq 250$      |       | Z | . 4 . . . . . |
| 5) 0... 10 V, $R_{ext} \geq 500$     |       | Z | . 5 . . . . . |
| 6) 2... 10 V, $R_{ext} \geq 500$     |       | Z | . 6 . . . . . |
| 7) Non - Standard                    | [ V ] | Z | . 7 . . . . . |
| Line 2: -22 to + 22, span 5 to 40 mA |       |   |               |
| Line 7: -12 to + 15, span 4 to 27 V  |       |   |               |

### 8. Output characteristic

|  |     |   |                 |
|--|-----|---|-----------------|
| 0) Directly proportional, initial start - up value 0%    |     |   | . . 0 . . . . . |
| 1) Inversely proportional, initial start - up value 100% |     | Z | . . 1 . . . . . |
| 2) Directly proportional, initial start - up value       | [%] | Z | . . 2 . . . . . |
| 3) Inversely proportional, initial start - up value      | [%] | Z | . . 3 . . . . . |

### 9. Output time response

|   |     |   |                   |
|---|-----|---|-------------------|
| 0) Rated setting time approx. 1 s       |     |   | . . . 0 . . . . . |
| 1) Others                               | [s] | Z | . . . 1 . . . . . |
| Line 1: Any whole number from 2 to 30 s |     |   |                   |

|  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|

|             |             |             |             |             |             |             |             |             |             |
|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| ↑           | ↑           | ↑           | ↑           |             |             |             |             |             |             |
| B . . . . . | E . . . . . | J . . . . . | K . . . . . | L . . . . . | N . . . . . | R . . . . . | S . . . . . | T . . . . . | U . . . . . |
| W . . . . . |             |             |             |             |             |             |             |             |             |

\* 2nd output signal A2 for field indicator only



**RISHABH INSTRUMENTS**  
 Measure, Control & Record with a Difference

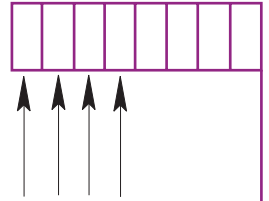
RISHABH INSTRUMENTS PVT.LTD.  
 F-31, MIDC, Satpur, Nashik-422 007, India.  
 Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
 E-mail : India :- marketing@rishabh.co.in  
 International :- exp.marketing@rishabh.co.in  
 www.rishabh.co.in



# RISH Ducer V 604

## Programmable universal transmitter

| Order Code 604 -   |  |  |  |  |  |        |       |   |   |   |   |   |
|--|--|--|--|--|--|--------|-------|---|---|---|---|---|
| Features, Selection  |  |  |  |  |  | *SCODE | no-go |   |   |   |   |   |
| <b>10. Open-circuit sensor signalling</b>  |  |  |  |  |  |        |       |   |   |   |   |   |
| Without / open-circuit sensor signal / relay / output signal A corresponding to input variable [%]   |  |  |  |  |  |        |       |   |   |   |   |   |
| 0) No sensor signal (for current or voltage measurement)   |  |  |  |  |  |        | DEF   | 0 | . | . | . | . |
| 1) With sensor signal / relay disabled / output signal A   |  |  |  |  |  |        | CZ    | 1 | . | . | . | . |
| 2) With sensor signal / relay energized / output signal A  |  |  |  |  |  | K      | CZ    | 2 | . | . | . | . |
| 3) With sensor signal / relay de-energized / output signal A   |  |  |  |  |  | K      | CZ    | 3 | . | . | . | . |
| 4) With sensor signal / relay energized / hold A at last value   |  |  |  |  |  | K      | CZ    | 4 | . | . | . | . |
| 5) With sensor signal / relay de-energized / hold A at last value  |  |  |  |  |  | K      | CZ    | 5 | . | . | . | . |
| Lines 1, 2 and 3: Specify value of output signal span in %, any value from -10% to 110%; e.g. with output 4...20 mA corresponding 2.4 mA -10% and 21.6 mA 110% |  |  |  |  |  |        |       |   |   |   |   |   |
| Lines 2 to 5: Cannot be combined with active trip point GW, Feature 12. lines 1 to 3 and Feature 13. lines 1 and 2   |  |  |  |  |  |        |       |   |   |   |   |   |
| <b>11. Mains ripple suppression</b>  |  |  |  |  |  |        |       |   |   |   |   |   |
| 0) Frequency 50 Hz   |  |  |  |  |  |        |       | . | 0 | . | . | . |
| 1) Frequency 60 Hz   |  |  |  |  |  |        | Z     | . | 1 | . | . | . |
| <b>12. Type and values of trip point GW</b>  |  |  |  |  |  |        |       |   |   |   |   |   |
| and reset ratio, energizing delay and de-energizing delay of the relay (for output contact K)  |  |  |  |  |  |        |       |   |   |   |   |   |
| 0) Alarm function inactive   |  |  |  |  |  | L      |       | . | . | 0 | . | . |
| 1) Low alarm [%;%;s;s]   |  |  |  |  |  | M      | KZ    | . | . | 1 | . | . |
| 2) High alarm [%;%;s;s]  |  |  |  |  |  | M      | KZ    | . | . | 2 | . | . |
| 3) Rate-of-change alarm dx/dt [%/s;%;s;s]  |  |  |  |  |  | M      | KZ    | . | . | 3 | . | . |
| <b>13. Sense of action of trip point (for GW resp. K)</b>  |  |  |  |  |  |        |       |   |   |   |   |   |
| 0) Alarm function inactive   |  |  |  |  |  |        | M     | . | . | . | 0 | . |
| 1) Relay energized in alarm condition  |  |  |  |  |  |        | KLZ   | . | . | . | 1 | . |
| 2) Relay energized in safe condition   |  |  |  |  |  |        | KLZ   | . | . | . | 2 | . |



\* Lines with letter (s) under "no-go" cannot be combined with preceding lines having the same letter under "SCODE".

### Important condition :

The RISH Ducer V 604 may only be programmed using a PRKAB 600 with component certificate PTB 97 ATEX 2082 U.



**RISHABH**  
INSTRUMENTS  
Measure, Control & Record with a Difference

RISHABH INSTRUMENTS PVT.LTD.  
F-31, MIDC, Satpur, Nashik-422 007, India.  
Tel.: +91 253 2202160, 2202202 Fax : +91 253 2351064  
E-mail : India :- marketing@rishabh.co.in  
International :- exp.marketing@rishabh.co.in  
www.rishabh.co.in

# *RISH Ducer V 604* Programmable universal transmitter

## NOTES

